

HOW TO CALIBRATE JLT/JLG CRANE SCALE

1. Hold "ZERO" + press ON/OFF, you will see screen appears SPEN



2. Then press "ZERO", you will see screen appear SET



3. Crane scale now begin to trace zero point scope. you will see screen left side appears "0", 5 seconds later appear 00000, Now entry the calibration weight figures you want.



4. Use the function key below
HOLD = move to different position
TARE = change figures number
please keyin figures to be 10000



5. After keyin figures, lift the calibration weight, wait until calibration weight stable; then press "ZERO", Screen will appear HOLD then showing 10000 figures



6. Now the calibration procedure finished.