

# QUICK START GUIDE

## Caution

- 1 Verify the local voltage and receptacle type are correct for the scale.
- 2 Place the scale on a level stable surface.
- 3 Avoid sudden temperature changes, vibration, wind and water.
- 4 Avoid load the weight exceed the maximum capacity on the platform
- 5 Please refer to operating instructions specified in manual.
- 6 When clean the scale, please disconnect the power

## Unpacking

Remove the scale from the carton, Inspect the scale for damage, Make sure all components are included

 
- 1.Label scale    2.Power cord    3.Stainless steel pan    4.Quick start guide  
 5.Manual        6.Verification Certificate    7.Pole assembly

## Leveling

- 1 The scale is equipped with a level indicator located back side of platter
- 2 Use the adjustable leveling feet located on the bottom of the scale until the bubble appears in the center of the indicator.



Level bubble

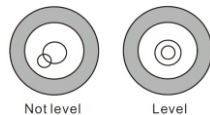

## Installation

- 1 Place the scale on the level surface.
- 2 Install the stainless steel pan on top of the platter support.




## Power Connection

- 1 Connect the supplied power cable to the power connection socket of the scale.
- 2 Plug the power plug into a correctly grounded power outlet.



Power Cord Socket

## Pole Display Installation

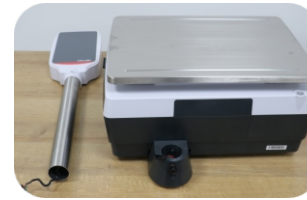

①



②



③



④



⑤

- 1 Take out pole display assembly
- 2 Connect male and female connectors well
- 3 Take the cable connectors into the pole
- 4 Insert pole with cable to the holder
- 5 Using the screw to fix the pole to the holder

## Power On/Off

### Power ON

Long press power-on button located below the scale until hearing the " beep " sound and the scale is on.

### Power OFF

**Method 1:** Press off key at the main menu , press "Power Off" at the pop up screen to turn off.

**Method 2:** Long press power-on button to turn off.


### Restart scale

Press off key at the main menu screen, press "Restart" at the pop up screen to restart the scale

**Note:** Avoid disconnecting the mains power supply directly when switch off the scale, otherwise the weighing data will be lost.



Power on button

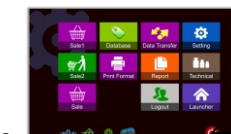


Off key

## Label Roll Installation



- 1 Open the printer cover  
Turn lever to open position

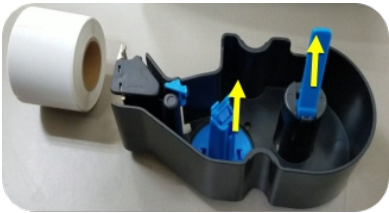


- 3 Release stopper levers  
Remove back paper roll  
and label core



- 5 Insert the Cassette  
Turn lever to close position



- 2 Remove the cassette

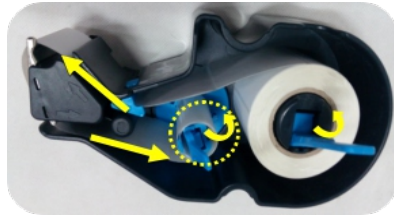


- 4 Insert Back paper under the slot  
of winding Bobbin and close the  
stopper levers



- 6 Close the printer cover

## Interfaces

- |   |        |  |
|---|--------|--|
| 1 | OTG    | Update system software                   |
| 2 | USB2.0 | For mouse, keyboard,<br>scanner          |
| 3 | USB2.0 | For mouse, keyboard,<br>scanner          |
| 4 | RJ45   | Ethernet (Giga LAN)                      |
| 5 | RJ11   | Cash drawer (12V)                        |
| 6 | RS232  | For printer or other supported equipment |
| 7 | RS232  | For printer or other supported equipment |

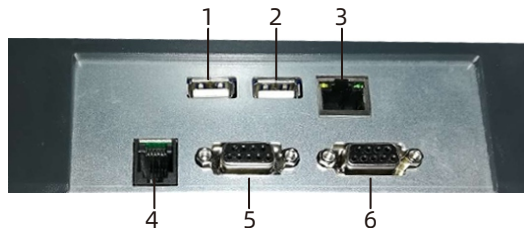

## Indication


### Label Mode

Measurement Information

Tare	kg Weight	kg Unit	Price	\$/kg Price	\$	Product Information		
0.000	0.000	0.00	0.00			7	8	9
Category						4	5	6
Fruits	Meat	Fish	Vegetable	More		1	2	3
Apple	Apricot	Banana	Cantalope	Carambole		.	0	Back
Preset PLU						CE	OK	
Cherry	Dragon Fruit	Grape	Hawthorn	Kiwi		Search	Pre-pack	Menu
Loquat	Mango	Mulberry	Orange	Papaya		Price	Tare	Feed
Peach	Pear	Persimmon	Pineapple	[1/4]		Q/TY	Zero	Print

### Main Menu

- |                      |  |
|----------------------|--|
| <b>Sale1</b>         | Operation View   |
| <b>Database</b>      | Product, Category, Format                                  |
| <b>Data Transfer</b> | Data import and export                                     |
| <b>Setting</b>       | General Settings   |
| <b>Sale2</b>         | Used for checkout application                              |
| <b>Print Format</b>  | Receipt Format Management                                  |
| <b>Report</b>        | Check/Print Reports  |
| <b>Technical</b>     | Technical Settings   |
| <b>Sale</b>          | Used for custom UI   |
| <b>Logout</b>        | Logout from current account                                |
| <b>LAUNCHER</b>      | Used for system setting and<br>network communication, ect. |

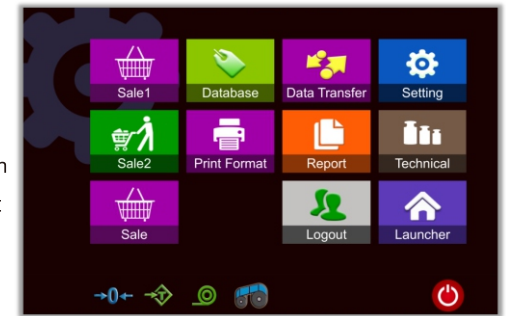

- ZERO, Perform Zero
- TARE, Perform Tare
- FEED, Paper Feed /Calibrate Test
- Recycle, Recycle on/off
- OFF key, Power off or restart

For the full operation manual,  
please scan the QR code below:



Website



IP30 Manual