



FEJ-SERIES WEIGHING SCALES 2 AND 5 KG

Scales for weighing postal packages, envelopes at any office, kitchen and food use etc.

FEATURES

- Auto shut off
- Auto zero tracking
- Auto calibration
- Low battery indication
- Large LCD (6digits 15 mm high)
- Large square weighing pan
- Net weight/stability indication
- oz/g/lb conversion

SPECIFICATIONS

Platter:	145×145mm
Net/gross weight:	510/625g
Package:	Standard carton: 23×16×5.5 (cm3) 12 Units in one box: 34×17×47 (cm3)
Operating Temp.:	0-400C (32-1040F)
Power source:	Adapter 230 VAC / 9-12 VAC/0,15 mA alternative 6 x AA Size Batteries (optional, not included)

WEIGHING PROCEDURES

- Press **ON/OFF** to turn on the scale.
When power is turned on, all display segments appear on LCD for a few seconds and finally "0" will appear on the display.
- Select the weighing unit with **UNIT**.
Press **UNITS** Key to select a weighing unit (eg. g, lb or oz) if necessary.
- Start weighing

IF YOU DO NOT USE A CONTAINER FOR WEIGHING

Verify the reading is "0". If not (<4% of capacity), press Z (ZERO) to display "0".
Place objects on the weighing platform to weigh.

IF YOU USE A CONTAINER FOR WEIGHING (TARE THE SCALE)

Place an empty container on the platform.
Press Z to display "0"
Place the objects to be weighed in the container.