



Error codes FCS

Error 2: Out of zero range, pls calibrate the scale.

Error 5: Not stable, Open the platform to see if the loadcell moved or blocked.
then check the wires.

"Err---Z" : The weight is more than capacity when the scale turn on

"Err---S" : Not stable

"Err---O" : Overweight, more than capacity+9e.