



Calibration OCS-5A

1. Press POWER + TARE, display shows CAL, then internal code.
2. Press TARE, display shows HALF.
3. Hang 2kg mass for the 5kg scale, or 5kg for the 10kg scale.
4. Press TARE, display shows FULL.
5. Hang 5kg mass for the 5kg scale, or 10kg for the 10kg scale.
6. Press TARE, display shows PASS. Turn off
7. Finish