

Radio channel setting EWB and LQW

Check pin on PCB of EWB and change the pin on PCB of indicator to be same.

