

A. Main Technical Function:

1. capacity: 70kg
2. precision: 1/14000 F•S.
3. display: liquid crystal with 5 digits.
4. inset power: DC 9V
5. power: Max power \leq 1.2 VA, normal power \leq 0.5 VA

B. Operation:

1. Put the scale on a solid and smooth platform.
2. After open the “ON/OFF” button, the scale will examine
Itself, you may find it zero place the normal condition.
3. Weight and Tare:

Not weight too heavy goods. If overload “OL” words appear , and with alarming, please take off the goods.

When use a container to weigh goods, please put the container on the plate first, push button “Z/T”, when “000.00” appear in the weight indicator window, then add the goods, you may get the net weight for goods.

4. Zero: without weighting goods, but weight indicator window appear not “000.00” ,please push button “Z/T” .
5. unit: push “unit” button is switch to kg→lb, lb→kg
6. back light: push “lamp” control back light on/off.

C. Attention:

- 1.It is prohibited to rain and wash the scale with water especially . The inner parts of the scale, it can't touch any water.
- 2.It is prohibited to put the scale on the mast place and in high temperature condition .
- 3.It is prohibited to crash and to be heavy load every the scale isn't in cause. The heavy goods over capacity is Prohibited to put on it
- 4.If the scale is stored for a long time, please take out the battery to prevent the scale from being damaged.
- 5.Please plug in the specified alternating current power.

TCS-M2 70KG/5G CALIBRATION

1.

PUT THE HAND ON THE PLATFORM ,AT THE SAME TIME ,TURN IT ON,

2.

THEN PUT THE KEY " Z/T " --- " UNIT " ---" Z/T " , THE DISPLAY
WILL BE " 07 --03 "

3.

RELEASE YOUR HAND FROM THE PLATFORM,ENTER THE KEY " Z/T " ,
THE DISPLAY WILL BE " 0 " , THEN PUT THE 30KG " WEIGHT " , PUT THE
KEY " Z/T " ,IT
WILL DISPLAY " 12000 " , ENTER THE UNIT , THE CALIBRATION IS OK,